

Instructions

Please read the following instructions carefully before using the product and keep them for future needs.

1. Usage and storage instructions

Do not expose the product to humid environments or extreme temperatures, it could be damaged. If water enters by accident, stop the operation to prevent a short circuit. Do not use our product more often or for a longer period than traditional cigarettes. Keep the product out of the reach of children, adolescents and pets.

2. Contraindications

When using liquids with and without nicotine: Please note the warnings and instructions for use of the liquid products and do not mix them with other substances. Do not use the product if you have a known problem with nicotine or other liquid ingredients. In case of nausea, dizziness or rash, discontinue use and consult a medic immediately. The electronic cigarette is not for smoking cessation.

3. Warnings

Delivery to and use by children and adolescents under the age of 18 is prohibited. The product is not recommended for non-smokers.

This product is not suitable for pregnant women, women who are breastfeeding, people with cardiovascular and respiratory diseases, alcoholics and epileptics. Do not use the product if you have lung disease (such as asthma, COPD, bronchitis, pneumonia). The released vapor may cause an asthma attack, shortness of breath and coughing fits in the case of a previously damaged lung. If complaints occur, please seek medical attention immediately. Do not use our product if you have a known problem (allergies, intolerances, etc.) with nicotine or other ingredients of our product.

When using nicotine-containing liquids: nicotine-containing products are not suitable for people who, for medical reasons, should abstain from nicotine products. If the liquid is swallowed, contact the emergency number. You can also contact the poison emergency service in your area.

4. Information on possible adverse health effects

- none known, see the instructions of the liquid.

5. Information on addictive effects

If you use products containing nicotine, the following warning is displayed on the packaging of the liquids: "This product contains nicotine: a substance that is highly addictive."

6. Information on toxicological data

Overheating the liquid (over 240 ° C) in the electronic cigarette may cause toxicological substances. Please use the electronic cigarette according to the manufacturer's recommendation and operating instructions. The use of this product is at your own risk.

7. Contact

If you need additional information or if you have questions about the products and their use, please contact our local shops or visit our website: www.smokerstore.de



Manufacturer:

SmokerStore GmbH,
Eisenwerkstraße 26,
58332 Schwelm, Deutschland
Email: info@smokerstore.de
Tel.: +49 (0)2336 / 935899-0
Fax: +49 (0)2336 / 4744870



PDF Instructions on website

1. PRODUCT DESCRIPTION

SCOPE OF DELIVERY

1x Taifun® GTC
1x 510 Drip Tip

1x 0,9 Ω dotAIO v2 Mesh Coil
1x Spare Parts Bag
1x Manual

TECHNISCHE DATEN

Dimensions:	30,0 x 23,0 mm	Weight:	~ 45,0 g
Thread:	510	Capacity:	~ 3,5 ml
Material:	Stainless Steel (1.4301) / POM / PCT-G		



2. SAFETY INSTRUCTIONS

- Do not expose the device to extreme temperatures; Avoid exposure to direct sunlight and high humidity.
- Do not use the device in an environment that is enriched with flammable gases, vapors or dusts; There is a danger of explosion!
- Do not drop, throw, or apply excessive force to the device to prevent damage; Do not use the device if you detect damage.
- Refill the liquid early to prevent dry hit.
- The device heats up during use; give it time to cool down again.
- Change the coil, if you change the flavor.
- Clean the device regularly, as condensate and dirt may settle.
- Make sure that the mod that you use with the device is capable of performance; use of mods without protection is not recommended.

3. MANUFACTURER RECOMMENDATIONS

- Adjust the power of your mod to an appropriate level, depending on the used coil.
- Use only dotAIO v2 Mesh Coils.

4. STORAGE INSTRUCTIONS

- If you don't use the device for an extended period of time, close the airflow control or empty the tank, remove the coil and clean the device.
- Keep the device out of the reach of children and pets.
- Ensure that the device is firmly and securely in place.
- Store the device clean and dry; avoid high humidity.
- Do not store the device under extreme temperatures; avoid exposure to direct sunlight.

5. DISPOSAL NOTICE

- The packaging must be disposed of in an environmentally friendly manner.
- Products marked with the crossed out bin, do not belong in the trash. These products can be disposed of free of charge in your local trade or at community collection points. Check with your local council, town hall or local waste management company.

AUTHENTICITY VALIDATION

You can check the authenticity of your Taifun product at www.taifun-check.com.

You can find the verification code and the serial number on your device: 12345678911-1234 (verification code - serial number)

6. PRODUCT OVERVIEW

COMPONENT OVERVIEW

A



1x Base

B



1x AFC Ring

C



1x Isolator

D



1x Pluspol Pin

E



1x O-Ring NBR 50 17x1 mm
(Base)

F



1x O-Ring NBR 50 15x1 mm
(Base)

G



1x Chamber

H



1x O-Ring NBR 50 17x1 mm
(Chamber)

I



1x PCT-G Tank

J



1x O-Ring NBR 50 5x1 mm
(Tank)

K



1x O-Ring NBR 50 15x1 mm
(Tank)

L



1x O-Ring NBR 50 17x1 mm
(Tank)

M



1x Top Cap

N



1x POM Drip Tip

O



2x O-Ring NBR 50 5x1 mm
(Drip Tip)

IMPORTANT

The device is delivered fully assembled. All O-Rings and isolators are already installed correctly. This list is only for illustration and possible assembly after cleaning the individual parts.



7. START UP

ATTACHING THE COIL

IMPORTANT

Only use compatible coils. The authorized retailer offers a wide range of different coils and can assist you in selecting the right one



We recommend **dotAIO v2 Mesh Coil**. These are available in different resistances.



First, unscrew the base from the rest of the atomizer.



Optional: If there is already a coil in the chamber, it must be removed first



Push a suitable coil into the chamber from below and press it in as far as it will go.



Now the chamber can be screwed back onto the base.

REFILLING THE TANK



First turn the Top Cap to the right until the opening for filling is visible.

Now fill liquid into the tank. Approx. 3.5 ml of liquid fit into the tank



Open the liquid supply by turning the Top Cap to the left.

The coil will now be saturated with liquid. Please wait 5 minutes!


IMPORTANT

- Wait a few minutes after filling so that the coil is sufficiently saturated with liquid.
- Once the coil is saturated, you can start vaping.
- Refill liquid in time to prevent the coil from running dry.



REGULATION OF THE LIQUID CONTROL

Different positions of the liquid control can be selected via the Top Cap. To do this, turn the Top Cap to the left or right

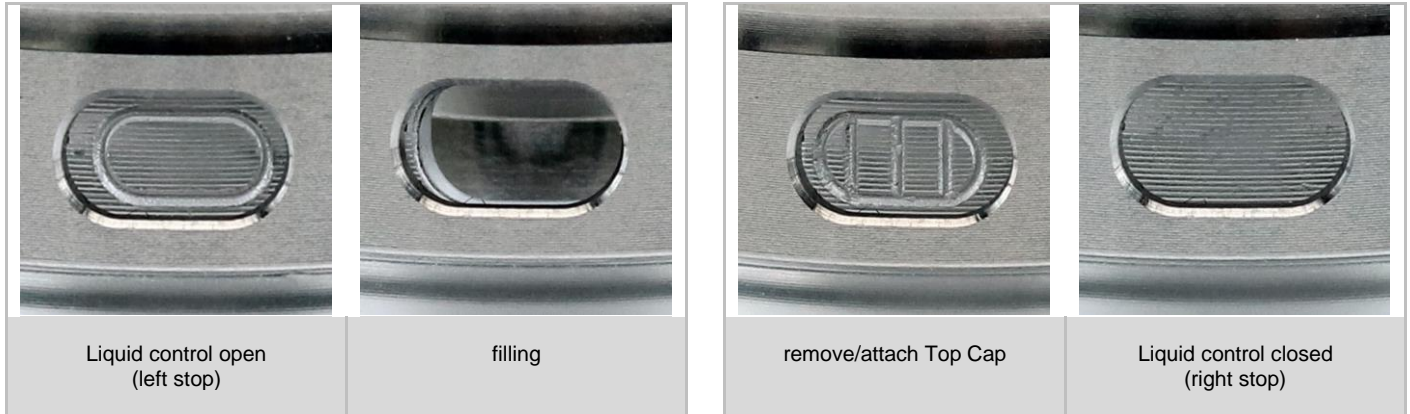

IMPORTANT

- During vape, always select the liquid control open position (left stop).
- Never use the device with the liquid control closed.
- Never use the device in open filling position.



REGULATION OF AIR FLOW

The air flow can be adjusted via the AFC ring. To do this, turn the AFC ring on the base either to the left or to the right.



IMPORTANT

- Make sure that the air holes are free before using the device. Remove any dirt.
- If some moisture escapes from the air hole, this may be condensation. Remove the moisture with a clean cloth.
- If larger amounts of liquid leak out of the air hole, please change the vaporizer head and check the o-rings for leaks.



8. CLEANING

Do not use cleaning agents as they could harm the O-Rings.

Before assembling, check the completeness and positioning of the O-Rings to prevent leakage of liquid.


- Disassemble the device into its components.
- Clean the components (not the coil) with warm water or in an ultrasonic bath.
- Completely dry the components before reassembling the device.

9. MAINTANANCE


- Wait until the device has completely cooled down before disassembling, to prevent burns.
- Make sure that there is no power supply by unscrewing the device from the mod or by switching off the mod.

ASSEMBLING DEVICE

- The device is usually delivered fully assembled, the following instructions are for the assembly after cleaning.
- Moistening the sealing rings with liquid makes the assembly easier.
- Please use only suitable tools for assembly.

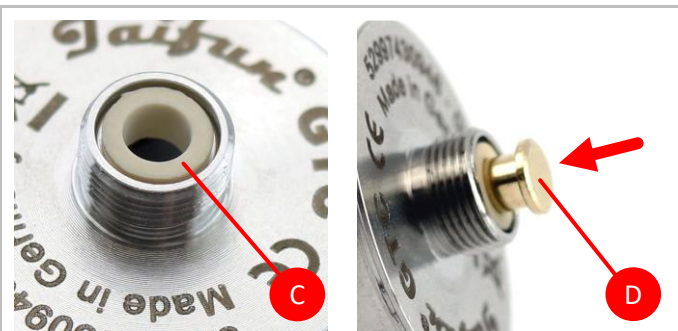

The isolator [C] is fixed in the base [A].
Then the positive pole [D] is pushed into the isolator [C].

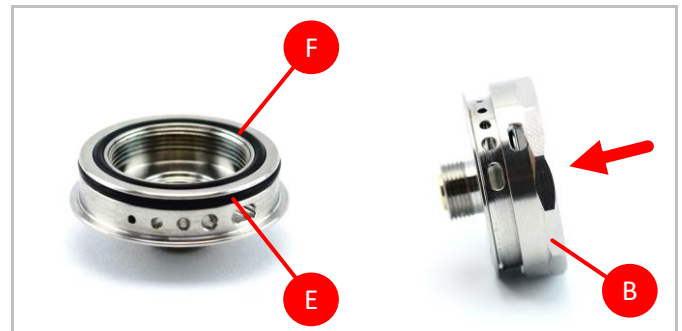

The o-rings [E,F] are placed in the base [A].
The AFC ring [B] is placed on the base [A].




The o-ring [H] is attached to the chamber [G].
The o-rings [J,K,L] are attached to the tank [I].



The tank [I] is placed on the chamber [G]. Please pay attention to the different recesses on the sides!



The chamber [G] is screwed onto the base [A].

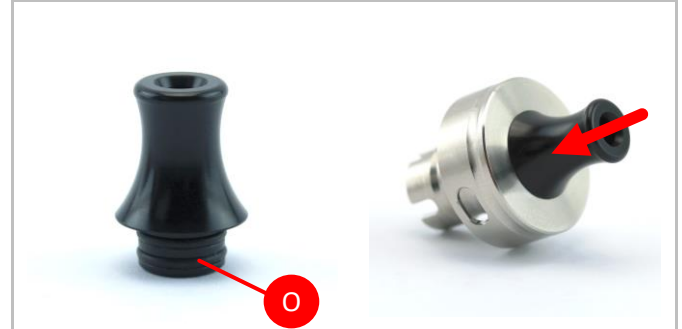

The two o-rings [O] are placed on the Drip-Tip [N].
The Drip-Tip [N] is placed on the Top Cap [M].



The top cap is placed on the tank.
Pay attention to the markings on the tank!



Then fix the Top Cap by twisting it. Done!

REPLACING THE PCT-G TANK

If the tank is damaged or broken, it must be replaced.

- Only use original spare parts, which can be obtained directly from www.smokerstore.de or from authorized dealers.
- Before replacing the tank, the atomizer must be completely emptied.

REPLACING SEALING RINGS

Sealing rings are used to seal the device.

- If you notice liquid or moisture leaking out of the device, the cause may be brittle seal rings that need to be replaced.
- Moistening the sealing rings with liquid makes the assembly easier.

If you have further questions about attaching a coil and the individual settings of the device, please contact your SmokerStore dealer or the SmokerStore service.